

UR5-8400A Programming Codes

TV's

Admiral - 072, 081, 160, 161, 096

Advent - 247

Aiko - 103

Akai - 006, 146, 248

Alaron - 028

Amark - 112 143

America Action - 043

Ampro - 073, 167

Anam - 043, 054, 055, 056, 080, 112

AOC - 058, 006, 004, 112

Apex Digital - 225, 226

Audiovox - 076 103 043

Baysonic - 043

Bell & Howell - 072

Bradford - 043

Broksonic - 096, 212

Candle - 006, 002, 003, 004

Capehart - 058

Carver - 164

Celebrity - 001

Cetronic - 043

Cineral - 103, 120

Citizen - 006, 002, 003, 004, 101, 103, 143

Classic - 043

Concerto - 004

Contec - 043, 051

Coronado - 143

Craig - 043, 054, 028

Crosley - 164

Crown - 043, 143

Curtis Mathes - 006, 004, 101, 143, 011, 072, 081, 120, 164

CXC - 043

Daewoo - 076, 103, 055, 004, 127, 143, 016, 043, 044, 125, 120

Daytron - 004, 143

Denon - 011

Dumont - 004, 073

Dwin - 161

Dynasty - 043

Dynatech - 062

Electroband - 001

Electrohome - 024, 076, 143

Emerson - 005, 028, 043, 048, 076, 096, 155, 004, 051, 143, 151, 153, 154

Fisher - 007, 057
Fujitsu - 028, 164, 208, 246
Funai - 028, 043, 052, 211
Futuretech - 043
GE - 006, 073, 130, 144, 160, 161, 004, 008, 009, 034, 056, 074, 091, 155, 081, 120
Gibraltar - 004, 073
Goldstar / LG - 004, 106, 119, 110, 112, 113, 127, 143
Davidson - 028, 164
Harvard - 043
Hitachi - 163, 004, 007, 009, 011, 072, 010, 012, 023, 075, 143, 158
Infinity - 164
Inkel - 129
Inteq - 073
JBL - 164
JCB - 001
JcPenney - 004, 006, 008, 024, 030, 065, 101, 143, 156, 160
Jensen - 013
JVC - 038, 001, 034, 083, 206, 209
Kenwood - 006, 001
Kloss - 002, 059
KTV - 006, 043, 143, 154
LG - 116
Lodgenet - 072
Loewe - 207
Logik - 072
Luxman - 004
LXI - 007, 015, 052, 081, 160, 164
Magnavox - 006, 003, 004, 022, 059, 060, 061, 063, 064, 127, 164, 094, 160, 028
Majestic - 072
Marantz - 164, 006
Matsui - 164
Matsushita - 080
Megatron - 004
Memorex - 004, 007, 072, 028, 096
METZ - 088
MGA - 024, 006, 004, 042
Midland - 073
Minerva - 088
Minutz - 008
Mitsubishi - 109, 024, 042, 004, 040, 146, 028, 081, 224
Motorola - 081
MTC - 006, 004, 062, 101
Multitech - 043
NAD - 015, 025
NEC - 006, 130, 134, 040, 056, 007, 019, 024, 215
Nikei - 043
Nikko - 103

NTC - 103
Onking - 043
Onwa - 043
Optimus - 080
Optonica - 019, 081
Orion - 096, 201, 202, 203, 204, 205, 028
Panasonic - 034, 056, 080, 164, 219, 222
Philco - 006, 003, 004, 024, 056, 059, 060, 063, 064, 127, 143, 164
Philips - 164, 005, 038, 093, 127, 006, 003, 004, 059, 223
Pioneer - 023, 025, 135, 176, 004, 018, 006, 216, 220
Portland - 004, 143, 103
Prism - 034
Proscan - 144, 160, 161, 167
Proton - 004, 058, 143, 171, 173, 193, 112
Quasar - 034, 056
Radio Shack - 004, 019, 127, 143, 043
RCA - 160, 161, 144, 156, 065, 006, 004, 023, 024, 056, 074, 152, 081
Realistic - 007, 019
Runco - 072, 169, 073, 130, 179, 180, 181
Sampo - 006, 004, 058
Samsung - 004, 101, 127, 133, 143, 160, 089, 105, 217, 218, 221
Sansei - 120
Sansui - 096
Sanyo - 007, 053, 057, 082, 020
Scotch - 004
Scott - 004, 005, 028, 043, 048, 143
Sears - 004, 007, 015, 028, 030, 057, 082, 094, 143, 160, 052, 164
Seleco - 189
Semivox - 043
Semp - 015
Sharp - 081, 014, 019, 028, 004, 022, 143, 175, 251
Signature - 072
Sole - 213, 214
Sony - 001, 126, 139
Soundesign - 003, 004, 028, 043
Spectricon - 112
Squareview - 052
SSS - 004, 043
Starlite - 043
Supremacy - 002
Supreme - 001
Sylvania - 006, 003, 059, 060, 063, 064, 127, 160, 164, 044, 211
Symphonic - 052, 211
Tandy - 081
Tatung - 056, 062
Technics - 034, 080
Technol Ace - 028

Techwood - 004
Teknika - 002, 003, 004, 024, 028, 043, 072, 101, 143, 103, 164
Telerent - 072
Tera - 172
Thompson - 210
TMK - 004
TNCI - 073
Toshiba - 015, 030, 007, 040, 062, 101
Totevision - 143
Universal - 008, 009
Video Concepts - 146
Vidikron - 174, 188, 164
Vidtech - 004
Wards - 004, 064, 164, 008, 009, 019, 028, 060, 061, 063, 072, 074, 143
Westinghouse - 076
Yamaha - 004, 006
York - 004
Yupiteru - 043
Zenith - 072, 073, 095, 103, 208, 011, 096
Zonda - 112

VCR & VCR/TV COMBOS

Admiral – 025, 053
Aiko – 117
Aiwa – 034, 161, 101
Akai – 043, 046, 124, 146
America Action - 117
American High - 031
Ampro - 072
Anam - 031, 103
Asha - 040
Audio Dynamics - 012, 023, 043
Audiovox - 101
Beaumark - 040
Broksonic - 035, 037, 129, 025
Calix - 101
Canon - 028, 031
Capehart - 108
CCE - 024, 117
Cineral - 117
Citizen - 101, 117
Colt - 024
Craig - 003, 040, 135, 024, 101
Curtis Mathes - 031, 041
Cybernex - 040

Daewoo - 005, 108, 111, 117, 017, 065, 007, 010
Daytron - 108
DBX - 012, 023, 043
Dynatech - 034, 053
Electrohome - 059, 101
Electroponic - 101
Emerson - 006, 029, 035, 037, 129, 153, 017, 025, 027, 031, 034, 036, 046, 101, 131, 138, 117
Fisher - 003 010 008 009
Fuji - 031
Funai - 034
Garrard - 034
GE - 031, 072, 144, 147, 063, 107, 109, 040, 053
Go Video - 132, 155, 040, 136
Goldstar / LG - 101, 004, 012
Harley Davidson - 034
Harman Kardon - 012, 045
Harwood - 024
Hitachi - 004, 026, 034, 043, 063, 137, 150
HQ - 034
Hugues - 004
Instantreplay - 031
JCL - 031
JCPenney - 004, 012, 031, 040, 101
Jensen - 043
JVC - 048, 043, 055, 060, 130, 150, 152, 012, 031
KEC - 101, 117
Kenwood - 034, 150, 014, 048
KLH - 024
Kodak - 031, 101
Lloyd - 034
Logik - 024
LXI - 003, 009, 017, 034, 101, 004
Magin - 040
Magnasonic - 117
Magnavox - 067, 031, 034, 068, 041, 156, 170
Marantz - 067, 069, 012, 031
Marta - 101
Matsui - 027, 030
Matsushita - 031
MEI - 031
Memorex - 040, 101, 003, 014, 031, 034, 053, 072, 134, 139, 025
MGA - 045, 046, 059
MGN Technology - 040
Minolta - 004
Mitsubishi - 059, 061, 051, 004, 046, 045, 053
Motorola - 031, 053

MTC - 034, 040
Multitech - 024, 034
NEC - 012, 023, 043, 048
Nikko - 101
Noblex - 040
Nordmende - 043
Olympus - 031
Optimus - 053, 101
Optonica - 053, 054
Orion - 025
Panasonic - 031, 070, 133, 140, 163
Pentax - 004, 031, 063
Philcp - 031, 034, 067, 025
Philips - 031, 034, 054, 067, 101, 150
Pilot - 101
Pioneer - 021, 004, 048
Portland - 108
Profitronic - 040
Protec - 024
Pulsar - 072
Quartz - 014
Quasar - 031, 070, 133, 140, 163, 014
Radio Shack - 123, 034
Radix - 101
Randex - 101
RCA - 107, 109, 144, 041, 031, 004, 034, 040, 140, 147, 158, 053
Realistic - 003, 008, 014, 031, 034, 040, 053, 054, 101, 010
Rico - 058
Runco - 072
Salora - 014
Samsung - 040, 017, 107, 109, 113, 115, 124
Sanky - 053
Sansui - 043, 135, 048, 025, 034
Sanyo - 003, 014, 040, 134
Scott - 017, 037, 129, 131
Sears - 003, 004, 008, 014, 017, 081, 101, 010, 031, 034
Sharp - 053, 031, 054, 159
Shintom - 024
Shogun - 040
Singer - 024
Sony - 001, 057, 058, 003, 052, 053, 031, 154, 171, 009, 034
Soundesign - 034
STS - 004
Sylvania - 031, 034, 059, 067
Symphonic - 034
Tandy - 034, 010
Tatung - 043

TEAC - 034, 043
Technics - 031, 070
Teknika - 031, 034, 101
Thomas - 034
TMK - 006, 040
Toshiba - 017, 131, 004, 008, 059, 082, 150
Totevision - 040, 101
Unitech - 040
Vector Research - 012
Video Concepts - 012, 034, 046
Videosonic - 040
Wards - 003, 004, 017, 024, 031, 034, 040, 053, 054, 131
Westinghouse - 024, 025
XR-1000 - 024, 031, 034
Yamaha - 012, 034, 043
Zenith - 072, 034, 001, 058, 080, 101, 153, 048, 025

DVD PLAYERS & DVD/TV COMBOS

Aiwa - 004, 008
Alpine - 221
Apex Digital - 251, 246
Arcam - 215
Cyberhome - 220
Daewoo - 220
Denon - 226, 241
Funai - 006, 230, 231
Video - 014
Goldstar / LG - 235, 250
Harman Kardon - 243
Hitachi - 223
Hiteker - 246
Integra - 002, 238
Kenwood - 216
KLH - 016
Krell - 011
Lexicon - 010
Magnavox - 254, 237
Marantz - 253, 242
Mcintosh - 217
Mintek - 251
Mitsubishi - 227
Myryad - 224 005
NAD - 247
Nakamichi - 225
Onkyo - 240
Optimus - 229

Panasonic - 228, 012
Philips - 253, 237, 214, 003
Pioneer - 255, 222, 229
Proceed - 245
Proscan - 230, 231
RC - 230, 231
Samsung - 236, 248, 014
Sanyo - 009
Sharp - 252
Sony - 001, 218, 007
Sylvania - 006
Symphonic - 006
Tatung - 224
Technics - 228
Theta Digital - 229
Toshiba - 233, 244, 219, 013
Venturer - 015
Yamaha - 249 234
Zenith - 250, 234, 235, 239

AMPLIFIERS/TUNERS

ADC - 200
Adcom - 072, 082, 092, 161
Aiwa - 025, 071, 104, 114, 170, 171, 091, 100
Akai - 139, 093
AMC - 125, 126, 127, 128
Angstrom - 142
Arcam - 141
Audio Access - 147
Audio Alchemy - 135
Audio File - 203
Audio Matrix - 077
Audio Technica - 134
B & K - 096, 097
Bose - 070, 170, 113
Bryston - 015
Carver - 003, 008, 028, 099, 151, 203, 014, 016, 040, 090
Casio - 204
Chiro - 140
Cinema Sound - 084, 134
Citation - 148
Clarion - 026
Curtis Mathes - 204
Denon - 084, 151, 155, 188, 056, 119
Enlightened Audio - 049, 050
Fisher - 151

Fosgate Audionics - 062, 148
Gold Star / LG - 072, 006
Harman Kardon - 153, 148, 162, 060, 066, 115
Hitachi - 020
Inkel - 005
JcPenney - 102, 204
Jensen - 058
JVC - 013, 163, 176
Kenwood - 005, 026, 057, 166, 095
Koss - 102
Krell - 150
Kyocera - 200
Lexicon - 120, 167, 171, 172
Luxman - 035, 137, 139, 165, 004, 029
LXI - 204
Magnavox - 152, 164, 191, 043
Marantz - 028, 048, 063, 191, 090
McIntosh - 173
MCS - 204
Meridian - 009, 051
Mitsubishi - 180
Mondial - 022, 023, 042, 073, 075
NAD - 048
Nakamichi - 111, 182, 183, 079, 087
NEC - 080
Onkyo - 084, 046, 012, 030, 041, 081, 103, 044
Optimus - 017, 036, 138, 026
Panasonic - 007, 088, 129, 130, 132, 195
Parasound - 129, 130, 132
Philips - 063, 188, 189, 191
Pioneer - 084, 039, 045, 054, 069, 078, 168, 128, 158
Proceed - 144
Quasar - 007, 088, 129, 130, 132, 195
RCA - 010, 067, 117, 156
Realistic - 019, 034, 037, 047
Rotel - 074, 083, 085
Samsung - 123
Sansui - 063, 110, 032, 116
Sanyo - 151
Scott - 019
Sears - 204
Sharp - 026, 057, 094, 175
Sherwood - 024, 038
Sony - 001, 011, 055, 187, 053, 112
Soundesign - 036
SSI - 068
TEAC - 019, 059, 111, 109

Technics - 076, 088, 122, 193, 080, 098

Theta Digital - 065

Toshiba - 033 112

Yamaha - 021, 026, 031, 067, 192, 002, 101, 118

Zenith - 143, 106 Yamaha - 2165, 2405, 2415**