

# Codes pour programmation du modèle AT8400

## **TV** ( \*Codes pour téléviseurs HD spécifiquement )

Abex - 1066

Admiral - 1001, 1013, 1028, 1139, 1159, 1075

Aiko - 1012, 1014

Akai - 1002, 1005

Alaron - 1022

Amtron - 1034

American Action - 1023

Anam - 1003, 1023, 1034, 1079

AOC - 1003, 1004, 1005, 1006, 1007, 1048, 1140, 1141, 1153

Apex - 1180

Audiovox - 1012, 1023, 1027, 1029, 1034

Belcor - 1003

Bell & Howell - 1001, 1016, 1042, 1062, 1075

Bradford - 1023

Broksonic - 1024, 1028, 1181

Brockwood - 1003

Candle - 1005, 1009

Carnivale - 1005

Carver - 1000

Celebrity - 1001, 1002

Cineral - 1012, 1027

Citizen - 1004, 1005, 1006, 1008, 1009, 1010, 1012, 1014, 1034, 1044, 1046, 1064, 1062, 1087, 1137, 1160

Colortyme - 1004, 1006, 1009

Concerto - 1009

Contec/Cony - 1010, 1011, 1012, 1023, 1034, 1063, 1065

Craig - 1023, 1034

Crosley- 1000

Crown - 1023, 1034, 1064

Curtis Mathes - 1000, 1004, 1005, 1006, 1007, 1009, 1010, 1013, 1014, 1016, 1019, 1027, 1034, 1036, 1042, 1046, 1053, 1062, 1064, 1087, 1137, 1160, 1167

CXC - 1023

Daewoo - 1003, 1004, 1005, 1006, 1012, 1014, 1015, 1016, 1027, 1029, 1029, 1030, 1064, 1103, 1137, 1151

Daytron - 1003, 1004, 1006, 1064, 1137

Denon - 1014

Dimensia - 1053

Dumont - 1002, 1003, 1004, 1122

Electroband - 1001, 1002

Electrohome - 1002, 1003, 1004, 1006, 1017, 1018, 1079

Emerson - 1003, 1004, 1006, 1010, 1016, 1019, 1020, 1021, 1019, 1022, 1023, 1024, 1025, 1026, 1027, 1028, 1029, 1030, 1031, 1032, 1033, 1034, 1035, 1036, 1037, 1038,

1039, 1034, 1042, 1044, 1045, 1062, 1063, 1064, 1067, 1068, 1069, 1101, 1137, 1142, 1143, 1152, 1168  
Envision - 1004, 1005, 1006  
Fisher - 1016, 1041, 1042, 1043, 1055, 1056, 1062, 1144  
Fijitsu - 1022, 1032, 1040  
Funai - 1020, 1022, 1023, 1034, 1040  
Futuretech - 1023  
GE - 1003, 1004, 1006, 1007, 1013, 1018, 1021, 1026, 1027, 1034, 1036, 1044, 1045, 1046, 1047, 1053, 1060, 1061, 1062, 1072, 1079, 1132, 1133, 1134, 1145, 1161  
Gibraltar - 1002, 1003, 1005, 1063  
Goldstar - 1003, 1004, 1005, 1006, 1009, 1010, 1017, 1021, 1047, 1048, 1049, 1064, 1066, 1126, 1127, 1137, 1138  
Gradiente - 1008, 1009  
Grundy - 1064  
Grunpy - 1022, 1023  
Hallmark - 1004, 1006, 1021  
Hardvard - 1023  
Harley Davidson - 1022  
Harman Kardon - 1000  
Hitachi - 1004, 1006, 1009, 1010, 1011, 1012, 1014, 1050, 1051, 1052, 1063, 1065, 1109, 1010, 1111, 1112, 1113, 1114, 1115, 1116, 1117, 1118, 1119, 1120, 1121  
Infinity - 1000, 1077  
Inteq - 1002  
JBL - 1000, 1077  
JCB - 1001  
JC Penney - 1004, 1005, 1006, 1008, 1011, 1018, 1044, 1045, 1048, 1049, 1053, 1061, 1072, 1086, 1087, 1104, 1137, 1138, 1145  
Jensen - 1004, 1006  
JVC - 1008, 1010, 1011, 1012, 1045, 1051, 1054, 1055, 1056, 1060, 1063, 1065, 1128, 1129, 1146, 1168, 1175\*  
JVC RMC383 - 1043  
Kawasho - 1002, 1004, 1006  
Kenwood - 1004, 1006, 1017  
Kloss Novabeam - 1034, 1057, 1058  
KTV - 1034, 1059, 1137, 1142  
LG - 1005  
Logik - 1001  
Luxman - 1004, 1006  
LXI - 1000, 1006, 1042, 1053, 1060, 1061, 1062, 1145  
Magnavox - 1000, 1004, 1006, 1008, 1017, 1057, 1058, 1063, 1064, 1065, 1073, 1106, 1107, 1108  
Majestic - 1001  
Marantz - 1000, 1004, 1006, 1050, 1066  
Megatron - 1006, 1050  
Memorex - 1001, 1005, 1006, 1042, 1062  
MGA - 1004, 1005, 1006, 1017, 1018, 1043, 1067, 1068  
Mitsubishi - 1004, 1005, 1006, 1017, 1018, 1043, 1067, 1068, 1069, 1102

Montgomery Ward - 1001  
Motorola - 1003, 1139  
MTC - 1004, 1005, 1006, 1087  
Multitech - 1034  
Multivision - 1070  
NAD - 1006, 1060, 1061, 1147, 1166  
NEC - 1003, 1004, 1005, 1006, 1009  
Nikko - 1006, 1014  
Onwa - 1034  
Optimus - 1147, 1166  
Optonica - 1079, 1139  
Orion - 1031, 1152  
Panasonic - 1003, 1045, 1136, 1162, 1179\*  
Philco - 1000, 1003, 1004, 1005, 1006, 1008, 1010, 1017, 1057, 1058, 1063, 1065  
Philips - 1000, 1003, 1004, 1008, 1010, 1017, 1057, 1058, 1063, 1071, 1072, 1073, 1074  
Pioneer - 1004, 1006, 1075, 1076, 1143, 1147, 1166  
Portland - 1004, 1005, 1006, 1014, 1137  
Price Club - 1087  
Prism - 1045  
Proscan - 1053, 1145  
Proton - 1004, 1006, 1010, 1021, 1063, 1077  
Pulsar - 1002, 1003  
Quasar - 1003, 1007, 1018, 1025, 1045, 1059, 1060, 1062, 1078, 1079  
Radio Shack - 1003, 1005, 1006, 1009, 1016, 1018, 1021, 1023, 1042, 1062, 1063, 1064, 1066  
Radio Shack/Realistic - 1004, 1006, 1010, 1034, 1042, 1053, 1062, 1079, 1137, 1138  
RCA - 1003, 1004, 1005, 1006, 1007, 1011, 1013, 1017, 1033, 1034, 1035, 1036, 1037, 1038, 1048, 1052, 1053, 1071, 1072, 1079, 1080, 1081, 1082, 1083, 1084, 1085, 1086, 1087, 1088, 1089, 1090, 1091, 1092, 1093, 1094, 1095, 1096, 1105, 1143, 1145, 1148, 1149, 1151, 1155, 1163, 1167, 1170, 1182  
Realistic - 1003, 1005, 1009, 1016, 1018, 1021, 1023, 1042, 1062, 1063, 1064  
Runco - 1002, 1005, 1122  
Sampo - 1004, 1006, 1137, 1138  
    Samsung - 1003, 1004, 1005, 1006, 1009, 1010, 1013, 1017, 1021, 1046, 1063, 1064, 1066, 1078, 1086, 1087, 1088, 1137, 1138, 1156, 1178\*  
Samsunx - 1064  
Sansei - 1027  
Sansui - 1028, 1152  
Sanyo - 1004, 1016, 1041, 1042, 1055, 1062, 1068, 1089, 1090, 1135, 1144  
Scimitsu - 1003  
Scotch - 1021, 1063  
Scott - 1003, 1004, 1006, 1010, 1020, 1021, 1022, 1023, 1024, 1031, 1034, 1040  
Sears - 1000, 1004, 1006, 1009, 1011, 1012, 1016, 1017, 1020, 1021, 1022, 1040, 1041, 1042, 1043, 1053, 1055, 1056, 1060, 1061, 1062, 1065, 1091, 1092, 1144, 1145, 1150  
Semivox - 1023  
Sharp - 1004, 1006, 1010, 1013, 1018, 1022, 1025, 1031, 1051, 1063, 1064, 1079,

1093, 1094, 1095, 1100, 1137, 1139  
Shogun - 1003  
Signature - 1001, 1075  
Sony - 1001, 1002, 1042, 1157, 1164, 1165, 1174\*, 1176\*, 1177\*  
Soundesign - 1004, 1006, 1008, 1021, 1022, 1023, 1034, 1040  
Squareview - 1020  
SSS - 1003, 1023  
Starlite - 1023, 1034  
Supreme - 1001  
Sylvania - 1000, 1004, 1005, 1006, 1008, 1017, 1049, 1050, 1054, 1057, 1058, 1059,  
1063, 1064, 1065, 1073, 1077, 1096, 1131  
Symphonic - 1020, 1029, 1034, 1150  
Tandy - 1013, 1139  
Tatung - 1003, 1079  
Technics - 1007, 1025, 1045, 1060, 1063  
Technol Ace - 1022  
Techwood - 1004, 1006, 1007, 1009, 1045, 1060  
Teknika - 1000, 1001, 1003, 1004, 1005, 1006, 1008, 1009, 1010, 1011, 1012, 1014,  
1015, 1022, 1023, 1034, 1040, 1046, 1064, 1065, 1064, 1087, 1136, 1137, 1162  
Telecaption - 1074, 1097  
Telefunken - 1009  
Thomson - 1039, 1171\*  
TMK - 1009, 1021  
Toshiba - 1010, 1016, 1017, 1040, 1041, 1042, 1046, 1054, 1060, 1061, 1062, 1070,  
1074, 1087, 1091, 1097, 1098, 1130, 1131, 1172\*, 1173\*, 1183  
Totevision - 1064, 1137  
Universal - 1044, 1072  
Vector Research - 1005  
Victor - 1008  
Vidikron - 1000  
Vidtech - 1003, 1021  
Wards - 1000, 1001, 1003, 1004, 1005, 1006, 1009, 1017, 1018, 1020, 1021, 1022,  
1029, 1040, 1044, 1049, 1050, 1053, 1054, 1057, 1058, 1063, 1064, 1072, 1073, 1075,  
1077, 1079, 1099  
White Westinghouse - 1028, 1029, 1030  
Yamaha - 1003, 1004, 1005, 1006, 1017  
Zenith - 1001, 1002, 1004, 1012, 1028, 1122, 1123, 1124, 1125, 1158

## **MAGNÉTOSCOPES**

Admiral - 2013, 2035, 2047  
Adventura - 2001  
Aiko - 2018, 2026  
Aiwa - 2001, 2006, 2017, 2027  
American High - 2005  
Asha - 2024

Audiovox - 2006, 2010  
Beaumarck - 2024  
Bell & Howell - 2007, 2017  
Brocksonic - 2002, 2018, 2020, 2022, 2029  
Calix - 2006, 2010  
Canon - 2005, 2014, 2015  
Capehart - 2030  
Carver - 2000  
CCE - 2016, 2018, 2024, 2026  
Cineral - 2026  
Citizen - 2006, 2009, 2010, 2011, 2012, 2013, 2018, 2026, 2045  
Colortyme - 2005  
Colt - 2016  
Craig - 2006, 2009, 2010, 2012, 2016, 2024, 2025  
Curtis Mathes - 2005, 2009, 2012, 2013, 2014, 2015, 2019, 2025, 2046  
Cybernex - 2024  
Daewoo - 2011, 2026, 2030  
Daytron - 2030  
Denon - 2009  
Dimensia - 2025, 2046  
Dynatech - 2001  
Electrohome - 2006, 2010, 2019  
Electroponic - 2006  
Emerex - 2004  
Emerson - 2001, 2002, 2006, 2008, 2010, 2011, 2014, 2017, 2018, 2019, 2020, 2021, 2022, 2026, 2029, 2032  
Fisher - 2007, 2012, 2016, 2020, 2021  
Fuji - 2003, 2005, 2014  
Funai - 2001, 2017  
Garrard - 2001, 2017  
GE - 2001, 2005, 2009, 2013, 2014, 2015, 2024, 2025, 2046  
Go Video - 2028, 2030, 2038, 2044  
Goldstar - 2005, 2006, 2007, 2010, 2013  
Gradiente - 2001, 2003, 2017  
Harley Davidson - 2001  
Harman Kardon - 2000, 2005, 2007  
Harwood - 2016, 2024  
Hi-Q - 2012  
Hitachi - 2001, 2009, 2022, 2023, 2029, 2031  
JC Penney - 2005, 2006, 2007, 2008, 2009, 2010, 2014, 2015, 2022, 2023, 2024, 2029  
Jensen - 2022, 2023, 2031  
JVC - 2003, 2005, 2006, 2007, 2013, 2015, 2031, 2033, 2039  
KEC - 2006, 2026  
Kenwood - 2005, 2006, 2007, 2012, 2013, 2015, 2031, 2033  
KLH - 2016, 2024  
Kodak - 2005, 2006, 2010, 2014  
LG - 2010

Lloyd's - 2001, 2021  
Logik - 2016, 2024  
LXI - 2006, 2010  
Magnasonic - 2026  
Magnavox - 2000, 2001, 2005, 2008, 2014, 2015, 2028  
Magnin - 2024  
Marantz - 2000, 2005, 2006, 2007, 2012, 2013, 2014  
Marta - 2006  
Matsushita - 2014, 2025, 2019  
MEI - 2005  
Memorex - 2001, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2016,  
2017, 2019, 2024, 2027, 208, 2033, 2035, 2036, 2037, 2047  
MGA - 2010, 2019, 2024, 2026, 2032  
MGN Tech - 2024  
Minolta - 2009, 2022, 2023, 2029  
Mitsubishi - 2010, 2013, 2015, 2019, 2022, 2023, 2026, 2032, 2033  
Motorola - 2005, 2013  
Montgomery Ward - 2035, 2047  
Motorola - 2014, 2035, 2047  
MTC - 2001, 2009, 2024  
Multitech - 2001, 2009, 2012, 2016, 2017, 2024  
NEC - 2005, 2006, 2007, 2012, 2013, 2015, 2017, 2031, 2033  
Nikko - 2006, 2010  
Noblex - 2009, 2024  
Olympus - 2005, 2014  
Optimus - 2006, 2010, 2013, 2017, 2019, 2028, 2034, 2035, 2047  
Optonica - 2027  
Orion - 2002, 2020, 2029  
Panasonic - 2005, 2014, 2015, 2019, 2023, 2031  
Penney - 2005, 2006, 2007, 2009, 2024  
Pentax - 2009, 2012, 2022, 2023, 2029  
Pentex Research - 2013  
Philco - 2005, 2014, 2015, 2022, 2029  
Philips - 2000, 2005, 2014, 2027, 2032  
Pilot - 2006  
Pioneer - 2006, 2015, 2022, 2033  
Portland - 2012, 2030, 2045  
Profitronic - 2024  
Proscan - 2001, 2014, 2025, 2046  
Protec - 2016  
Pulsar - 2008  
Quarter - 2011  
Quartz - 2011  
Quasar - 2005, 2014, 2015, 2019  
Radio Shack - 2001, 2010, 2027, 2047  
Radio Shack/Realistic - 2007, 2009, 2010, 2014, 2015, 2016, 2017, 2019, 2020, 2021,  
2027, 2035

Radix - 2006, 2010  
Randex - 2006  
RCA - 2001, 2002, 2005, 2009, 2013, 2014, 2022, 2023, 2024, 2025, 2029, 2040, 2046  
Realistic - 2001, 2005, 2006, 2007, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2019, 2020, 2021, 2027, 2035, 2047  
Ricoh - 2034  
Runco - 2008, 2028  
Samsung - 2004, 2009, 2011, 2024, 2041  
Sanky - 2008, 2013  
Sansui - 2001, 2006, 2025, 2029, 2031, 2033  
Sanyo - 2007, 2009, 2011, 2012, 2016, 2017, 2024, 2042  
Scott - 2008, 2010, 2011, 2018, 2020, 2026  
Sears - 2001, 2005, 2006, 2007, 2009, 2010, 2011, 2012, 2014, 2016, 2017, 2020, 2021, 2022, 2023, 2029  
Semp - 2011  
Sharp - 2013, 2019, 2027, 2035, 2045, 2047  
Shintom - 2003, 2016, 2023, 2024  
Shogun - 2024  
Singer - 2016  
Signature - 2035, 2047  
Signer - 2014, 2024, 2034  
Sony - 2001, 2003, 2004, 2005  
STS - 2009, 2014, 2029  
Sylvania - 2000, 2001, 2005, 2010, 2014, 2015, 2017, 2026  
Symphonic - 2001, 2017  
Tandy - 2007  
Teac - 2001, 2017, 2031  
Technics - 2005, 2006, 2014, 2019  
Teknika - 2001, 2005, 2010, 2014, 2017  
Thomas - 2001  
Thomson - 2038  
TMK - 2021, 2024  
Toshiba - 2010, 2011, 2020, 2022, 2026, 2032  
Totevision - 2006, 2009, 2010  
Unitech - 2009, 2024  
Vector - 2011  
Vector Research - 2005, 2006, 2007, 2011, 2012  
Video Concepts - 2005, 2006, 2011, 2012, 2032  
Videosonic - 2016, 2024  
Wards - 2000, 2001, 2005, 2009, 2010, 2011, 2012, 2013, 2014, 2016, 2017, 2019, 2022, 2023, 2024, 2027, 2029, 2035, 2047  
White Westinghouse - 2026  
XR-1000 - 2001, 2005, 2014, 2016, 2017, 2024  
Yamaha - 2005, 2066, 2007, 2013, 2031  
Zenith - 2001, 2003, 2008, 2028, 2034, 2043

## **LECTEURS DVD** ( \*Tester ce code avec les touches vol+ ou vol- )

Aiwa - 2057, 2070, 2218

Alpine - 2071

Apex - 2068, 2069, 2072, 2073

Bose - 2140

Broksonic - 2074, 2148

Clarion - 2075

Classic - 2076

Daewoo - 2077

Denon - 20, 78, 2079, 2080, 2081

Emerson - 2082, 2083

Fisher - 2084

Funai - 2083

GE - 2048, 2085\*\*, 2086

Go Video - 2141, 2147

GPX - 2087

Harman Kardon - 2211

Hitachi - 2017, 2056, 2088, 2089, 2090, 2091

JVC - 2208, 2213, 2219, 2050, 2058, 2092, 2142

Kenwood - 2093, 2206

Konka - 2059, 2060, 2220, 2221

Magnavox - 2051, 2094, 2201

Memorex - 2095

Mintek - 2096

Mitsubishi - 2052, 2202

NAD - 2082

Nakamichi - 2097

Norcent - 2098, 2099

Onkyo - 2100, 2201, 2214

Optimus - 2204

Oritron - 2114

Panasonic - 2061, 2101, 2102, 2103, 2104, 2105, 2106, 2200, 2216, 2222

Philips - 2051, 2067, 2107, 2201, 2228, 2230

Pioneer - 2053, 2108, 2109, 2110, 2111, 2204, 2209

Proscan - 2048, 2112, 2203

Qwestar - 2113, 2114

RCA - 2048, 2049\*\*, 2115, 2143, 2149, 2203, 2232

Sampo - 2116

Samsung - 2117, 2118, 2119, 2144, 2210

Sansui - 2120

Sanyo - 2062, 2121, 2145, 2223

Sharp - 2122, 2123, 2215

Sherwood - 2124

Shinco - 2233\*\*

Sony - 2054, 2063, 2064, 2125, 2126, 2127, 2128, 2129, 2205, 2224, 2225

Sylvania - 2083

Teac - 2130  
Technics - 2131, 2200  
Techwood - 2132  
Toshiba - 2055, 2065, 2133, 2134, 2135, 2150, 2201, 2229, 2226  
Yamaha - 2136, 2137, 2138, 2200, 2207\*\*  
Zenith - 2066, 2139, 2146, 2201, 2212, 2227

## **Récep/ampli** ( \*Tester ce code avec les touches vol+ ou vol- )

Aiwa - 3000, 3001, 3002, 3003, 3004, 3006, 3008, 3014, 3015, 3020, 3024, 3047, 3048, 3049, 3050, 3051, 3059, 3060, 3061, 3062, 3207  
Capetronic - 3012  
Carver - 3000, 3019, 3202  
Curtis Mathes - 3203  
Denon - 3016, 3018, 3063, 3064, 3201  
Harman Kardon - 3000, 3005, 3013, 3065  
JBL - 3005, 3013  
JVC - 3004, 3005, 3052, 3066, 3205\*  
Kenwood - 3002, 3006, 3013, 3023, 3026, 3053  
Linn - 3000, 3202  
Magnavox - 3000, 3012, 3202  
Marantz - 3000, 3003, 3070, 3203  
MCS - 3003  
Onkyo - 3007, 3015, 3068  
Optimus - 3012, 3027  
Panasonic - 3003, 3010, 3016, 3017, 3025, 3202, 3204  
Philips - 3000, 3202  
Pioneer - 3001\*, 3012\*, 3067, 3200, 3203  
Quasar - 3003  
RCA - 3007, 3012, 3054  
Sansui - 3000  
Sherwood - 3011, 3019  
Sony - 3008, 3009, 3014, 3017, 3018, 3020, 3055, 3056, 3208  
Technics - 3003, 3010, 3016, 3017, 3021, 3022, 3202, 3204  
Victor - 3004, 3205\*  
Wards - 3000, 3001\*, 3008, 3012, 3200  
Yahama - 3009, 3010, 3011, 3012\*, 3057, 3058, 3069, 3206

## **LECTEURS CD** ( \*Tester ce code avec le bouton PLAY )

ADC - 2166  
Aiwa - 2151, 2411  
Akai - 2167  
Burmeister - 2419  
California Audio Lab - 2403  
Carver - 2411, 2413  
Denon - 2401, 2426

DKK - 2400  
Emerson - 2152, 2418  
Fisher - 2153, 2413  
Garrard - 2419  
GE - 2169  
Genexxa - 2404, 2418  
Harman Kardon - 2411, 2412  
Hitachi - 2154, 2404  
JVC - 2155, 2408  
Kenwood - 2156, 2402, 2406\*\*, 2416, 2422, 2423  
Krell - 2411  
Linn - 2411  
LXI - 2418  
Magnavox - 2411, 2418  
Marantz - 2158, 2403, 2411, 2414  
MCS - 2403  
Mission - 2411  
Mitsubishi - 2170  
MTC - 2419  
Nakamichi - 2172  
NEC - 2157  
Onkyo - 2159, 2409, 2425  
Optimus - 2400, 2404, 2406\*\*, 2410, 2413, 2418, 2419, 2420  
Panasonic - 2160, 2403, 2417  
Parasound - 2419  
Philips - 2411  
Pioneer - 2161, 2404, 2418, 2420  
Proton - 2411  
QED - 2411  
Quasar - 2403  
RCA - 2162, 2407, 2413, 2418  
Realistic - 2413, 2414, 2419  
Rotel - 2411, 2419  
SAE - 2411  
Sansui - 2411, 2418  
Sanyo - 2175, 2413  
Scott - 2418  
Sears - 2168, 2418  
Sharp - 2406\*\*, 2414, 2424  
Sherwood - 2173, 2414  
Sony - 2163, 2400, 2421  
Soundesign - 2410  
Tascam - 2419  
Teac - 2174, 2414, 2419  
Technics - 2164, 2403  
Toshiba - 2171  
Victor - 2408

Wards - 2407, 2411

Yamaha - 2165, 2405, 2415\*\*