



capsule

USING PARENTAL CONTROL

With the parental control feature, you can block


1. Certain viewing times,
2. Specific channels,
3. Some types of programs.

All you need is your individual PIN!

Your default PIN: 0000

» Activating parental control

Once you have determined the channels, times and types of programs to be blocked, you need to activate the parental control feature by following the steps below:

1. Press SETTINGS twice, select BLOCK: PIN, choose the ENABLE feature and press SELECT.
2. Press  and enter your PIN.

» To block viewing times

1. Press SETTINGS twice, select BLOCK: TIME NEW and press SELECT.
2. Determine blocked times by following the instructions on screen.


» To block channels

1. Press SETTINGS twice, select BLOCK: CHANNELS and press SELECT.
2. Determine blocked times by following the instructions on screen.

» Blocking types of programs

1. Press SETTINGS twice, select BLOCK: RATING and press SELECT.
2. Determine blocking times by following the instructions on screen.

» To deactivate this feature, follow the instructions below:

1. Press SETTINGS twice, select BLOCK: PIN, choose DISABLE and press SELECT
2. Press  and enter your PIN to disable (or change) the feature.
3. At this step, you can also change your PIN by selecting CHANGE.

You can also unblocked access to a blocked channel by tuning it in and following the instructions on the screen.

For technical support, call us!

Montréal
Saguenay
Québec
Outaouais
Elsewhere in Quebec

(514) 841-2611
(418) 543-4611
(418) 842-2611
(819) 771-2611
1 877 380-2611

